

# Control Board, Recovery and Flashing by dint of SD Card

This method is suitable for ASIC Antminer

**S9se/S9k/Z9/Z11/T15/S15/T17/S17/S17pro/S17+/T17+/S17e/T17e/S19/S19pro**

Prepare before you go:

- Computer with Windows 7 system or above
- Card reader
- SD card with capacity lower than 16G storage with FAT32 format

Control board recovery step:

1. Go to <http://asicclub.com.ua/en/asic-firmware/>
2. Download the "Antminer\_S17\_S17pro\_SD.rar", or other software



3. Extract the S17\_S17pro\_SD" files. And copy the extracted files as below to SD Card.

bin	06.04.2020 14:20
.DS_Store	05.06.2019 19:44
BOOT	22.01.2019 23:42
devicetree.dtb	27.08.2018 15:38
ulmage	22.01.2019 23:42
uramdisk.image	22.01.2019 23:42

4. Remove the SD card from computer.
5. Power off miner.
6. Insert the SD card properly to the miner.
7. Power on miner. Allow at least 90 seconds for the files to load automatically. When loaded, the red and green indicator lights on the miner will blink
8. Power off miner. Then remove the SD card.
9. Power on miner.

Tutorial Video Link: <https://youtu.be/DG5GNgF9ZzI>

---

# Control Board, Recovery and Flashing by dint of SD Card

This method is suitable for ASIC Antminer


**L3/L3+/L3++/D3/X3/A3**

Prepare before you go:

- Computer with Windows XP system or above
- Card reader
- 16G or TF (Micro SD) memory card with less storage

First, copy the program.

1. Download firmware to the computer in advance from the link: <http://asicclub.com.ua/en/asic-firmwa>

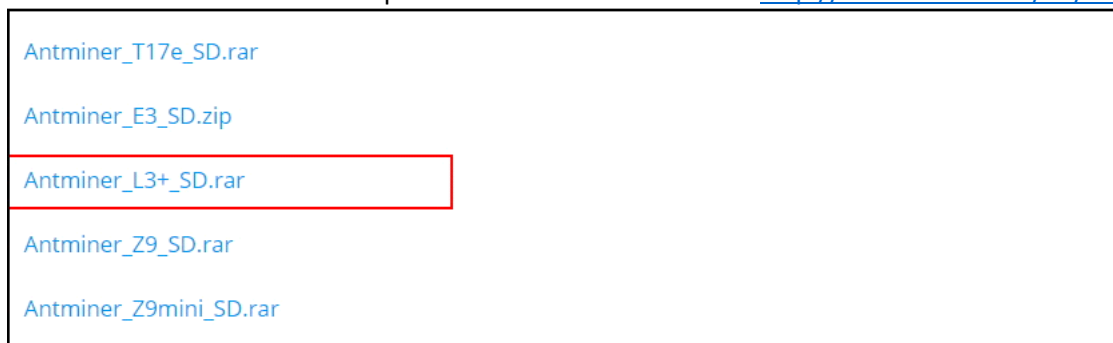

2. Install the TF card on the card reader, and then connect to the computer.
3. Format the TF card in FAT32.
4. Extract the firmware files. And copy the extracted files as below to SD Card.

📁 nand	2017/2/9 16:51	文件夹	
📄 am335x-boneblack-bitmainer.dtb	2016/9/27 20:54	DTB 文件	20 KB
📄 initramfs.bin.SD	2017/4/19 12:54	SD 文件	10,372 KB
📄 MLO	2014/8/8 14:13	文件	99 KB
📄 u-boot	2015/1/4 17:08	光盘映像文件	372 KB
📄 uEnv	2014/7/29 9:55	文本文档	1 KB
📄 ulmage.bin	2014/12/2 15:59	BIN 文件	4,301 KB

5. Remove the SD card from computer.
  6. Power off miner.
  7. Insert the SD card properly to the miner.
  8. Power on miner. Allow at least 90 seconds for the files to load automatically. When loaded, the red and green indicator lights on the miner will blink
  9. Power off miner. Then remove the SD card.
  10. Power on miner.
-

# Control Board, Recovery and Flashing by dint of SD Card

This method is suitable for ASIC Antminer

**S9/S9i/S9j/S9D/S9\_6 board/S11/T9/T9+/E3**

## Prepare before you go:

- Computer with Windows 7 system or above
- Card reader
- SD card with capacity lower than 16G storage with FAT32 format


## Control board recovery step:

1. Go to: <http://asicclub.com.ua/en/asic-firmware/>
2. Download: the "S9\_S9i\_SD.rar", or other software



## Flashing Instructions :

1. Remove control board from miner assembly.
2. To enable it to flash using SD card, you need to shift the JP4 jumper to the right as shown below.

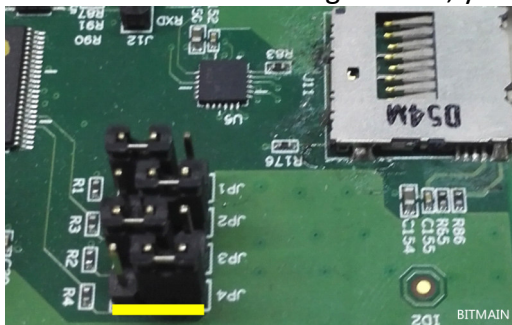

3. Insert MicroSD card into computer and format to FAT32.
4. Unzip the S9\_S9i\_SD.rar and copy the contents to the MicroSD card.

Имя	Дата изменения	Тип
bin	31.03.2020 12:31	Папка с файлами
BOOT	12.01.2019 11:23	BIN File
devicetree.dtb	12.01.2019 11:18	Файл "DTB"
ulmage	12.01.2019 11:23	Файл
uramdisk.image	12.01.2019 11:23	Архив WinRAR

5. Insert the MicroSD card into the card slot on the control board
6. Power on the control board. Allow at least 90 seconds for the files to load automatically. When loaded, the red and green indicator lights on the control board will blink.
7. After flashing completed, power off the control board and shift the JP4 jumper back to the original position.
8. Insert the control board into the device and Power on miner.

Tutorial Video Link: [https://youtu.be/6\\_4oxhVT6hg](https://youtu.be/6_4oxhVT6hg)